

DockMate Plus User's Guide Addendum

Noise Reduction

This document is an addendum to the *DockMate Plus User's Guide*. The information herein is intended for users of TravelMate 5000 Series notebook computers with DockMate Plus docking stations.

When your TravelMate computer is docked in the DockMate Plus, you may experience extraneous noise from the speakers. The following is a workaround to minimize the noise, by switching from advanced to standard power management.

If you are using Windows 95:

1. Double-click on **Control Panel** from the Settings selection in the Start menu.
2. Double-click on the **Power** icon.
3. Click on the **down arrow** in the Power Management window
4. Click on **Standard**.
5. Click on **OK**, and close the Control Panel.

If you are using Windows for Workgroups v3.11:

1. Double-click on **Control Panel** from the Program Manager.
2. Double-click on the **Power** icon.
3. Click on the **down arrow** in the Power Management window.
4. Click on **Standard**.
5. Click on **OK**, and close the Control Panel.